

E6-L 蓝牙音箱
Bluetooth Speaker

USER MANUAL

Table of Contents

01 - 08 English

09 - 16

17

01 Warnings

English



To ensure proper use and trouble-free operation, please carefully read this user manual first.

For the first use, a full charge is recommended.

Please use and store the product at room temperature.

Do not throw and drop the product to avoid damages.

Do not expose the product to fire, high temperature, direct sunlight, etc.

Do not use organic solvents or other chemicals to clean the product.

Do not allow small particles to get into the product.

Please keep volumes of the speaker moderate to avoid temporary or permanent hearing impairment.

Do not disassemble the product, or make any modifications to the structure or any parts of it.


Keep the product out of children's reach.

If the battery is not properly replaced, there will be an explosion accident, which can only be replaced with the same type of battery.


Batteries (battery packs) can not be exposed to such conditions as sunshine, fire or similar overheating conditions.

02 Packing contents

English

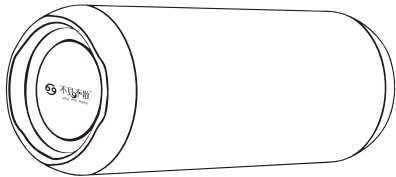

E6-L 1pc

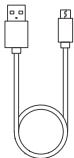

USB-C charging/data cable 1pc



3.5mm audio cable 1pc



User manual 1pc




Strap 1pc

03 Instructions of buttons

English

RGB lights

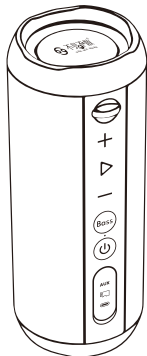

Press: turn up **press and hold:** skip to the next track

Under playback: press to play/pause

When a call comes in: press to receive, end; press and hold to reject.

Disconnection: press and hold 2s, disconnect the Bluetooth.

RGB display: press two times to shift different display modes.

Press: turn down **press and hold:** skip to the previous track.

Press to switch standard and bass enhancing modes

LED indicator

Power on: Blue LED flickering, it stays once Bluetooth connected.

MAX/MIN vol.: blue LED quick flashing.


Power button: press and hold 2s to turn on or turn off / press two times to check battery capacity.

Reset: press and hold 8s to reset.

Modes shifts: press to shift different modes (Bluetooth --> Micro SD --> AUX IN) need insert Micro SD card + 3.5mm audio cable

04 Instructions of ports

English

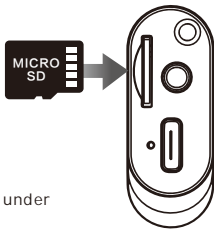

Micro SD playback

Insert a Micro SD card under powered on state, E6-L will play the music from the Micro SD card automatically.

Indicating LED

the red LED is on during charging, it's out once fully charged.

Audio cable

Insert an audio cable, E6-L will shift to AUX In mode automatically.

Charging

Take an adapter of DC 5V~1A(or above) or via an USB port of computer to charge.

Data transferring

Power off E6-L, insert a Micro SD card, meanwhile, let a data cable connect E6-L to a computer, press the power button of E6-L to enter card reader mode, then, we can access the data on the Micro SD card through the computer.

Check the battery's capacity

Power on E6-L, press two times on power button, check the colors of light.

green: capacity is over 65%

orange: capacity is 30-60%

red: capacity lower than 30%, need charge.

This B

in the future use.

1. How to set the TWS

Prepare 2pcs E6-L, turn on them, and both are under Bluetooth available state;

Take either of E6-L, press "+ -" at the same time, the TWS is done with a prompt sound.

2. Let the TWS set connect to a Bluetooth device

Go to Bluetooth page of the device, search and connect the pairing name " E6-L",

The LED will stay once connected.

3. How to disconnect the TWS

Take either of E6-L, just press "+ -" at the same time.

Tip

01. the one you took to press "+-" to set TWS, is the main speaker & left channel

and the other one is the following speaker & right channel.

02, a TWS set only support 2pcs E6-L.

03, TWS set will keep the consistency of main/following speakers, both will reconnect each other automatically when powered on.

04, When the TWS set is done, the LED of following_E6-L keep staying; and the LED of main_E6-L will indicate the playback/pause/connecting via flickering/stay.

05, Press the buttons on either E6-L has same operations.

07 Specifications

English

Basic parameters	
Speaker Type	Bluetooth speaker
Storage Type	Support Micro SD card within 32GB capacity
Power supply	Built-in 3.7V/5000mAh Li-Ion battery
	DC 5V-1A power, the charging time is around 6 hours
Technical parameters	
Drivers	2pcs 50mm positive drivers+2pcs 60mm bass enhancing radiators.
Frequency response	60-20KHZ
Bluetooth version	Bluetooth 5.3
USB	USB2.0, compatible with USB1.1
Formats on Micro SD card	MP3 WMA WAV APE FLAC
Bit rates	MP3: 8Kbps-320Kbps WMA: 32Kbps-384Kbps MAV: 32Kbps-1414Kbps

75mm




193mm

Product size: 193x75x75mm


Product weight: 508g(built-in battery)

ccc

09

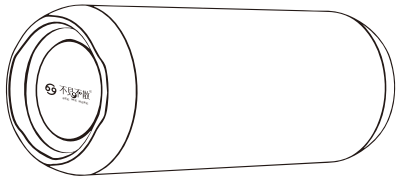

1

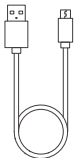

USB

/

1




3.5mm

1




1

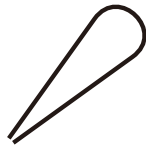


1

RGB

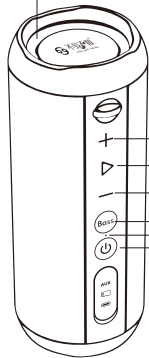

- 短按: 长按:
- 播放音乐时: /
- 通话接听键:
- 蓝牙断开: 2
- RGB灯光调节: PLAY RGB
- 短按: 长按:
- BASS键: /
- LED指示灯
- 开机:
- 最大/最小音量
- 电源键: 长按2 / 双击
- 系统复位: 8
- 模式切换: 短按模式切换
- Micro Sd AUX
- Micro SD +

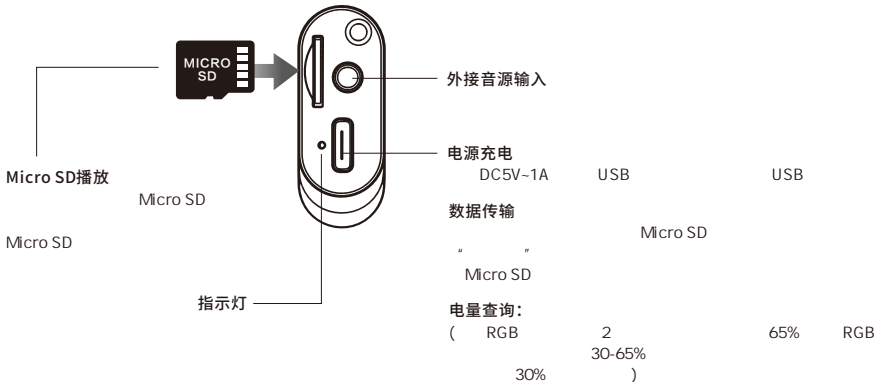

1、音箱开机

E6-L

13 TWS



1、TWS连接操作

TWS

" + - "

2、将串联音箱连接到移动设备播放

3、TWS断开操作

" + - "

TWS

其它说明：

01

TWS

"

"

TWS

02 TWS

2

03 TWS

TWS

04 TWS

LED

05

基本参数	
	32G Micro SD
	5000mAh
	DC5V-1A USB 6
技术参数	
	2 50mm +2 65mm
	60-20KHZ
	Bluetooth 5.3
USB	USB2.0 USB1.1
播放功能	
	MP3 WMA WAV APE FLAC
	MP3:8Kbps-320Kbps
	WMA:32Kbps-384Kbps
	WAV:32Kbps-1414Kbps

产品规格:193× 75× 75mm

产品净重:508g

75mm



193mm



自助售后服务



不见不散公众号

生产企业:深圳市不见不散电子有限公司

地 址: 深圳市宝安区航空路32号-不见不散视听创新园

电 话: 0755-61181399 网 址: www.hb2099.com